

Mini Keychain Camera



Instruction Manual

EN



Mode:G6

Product Overview

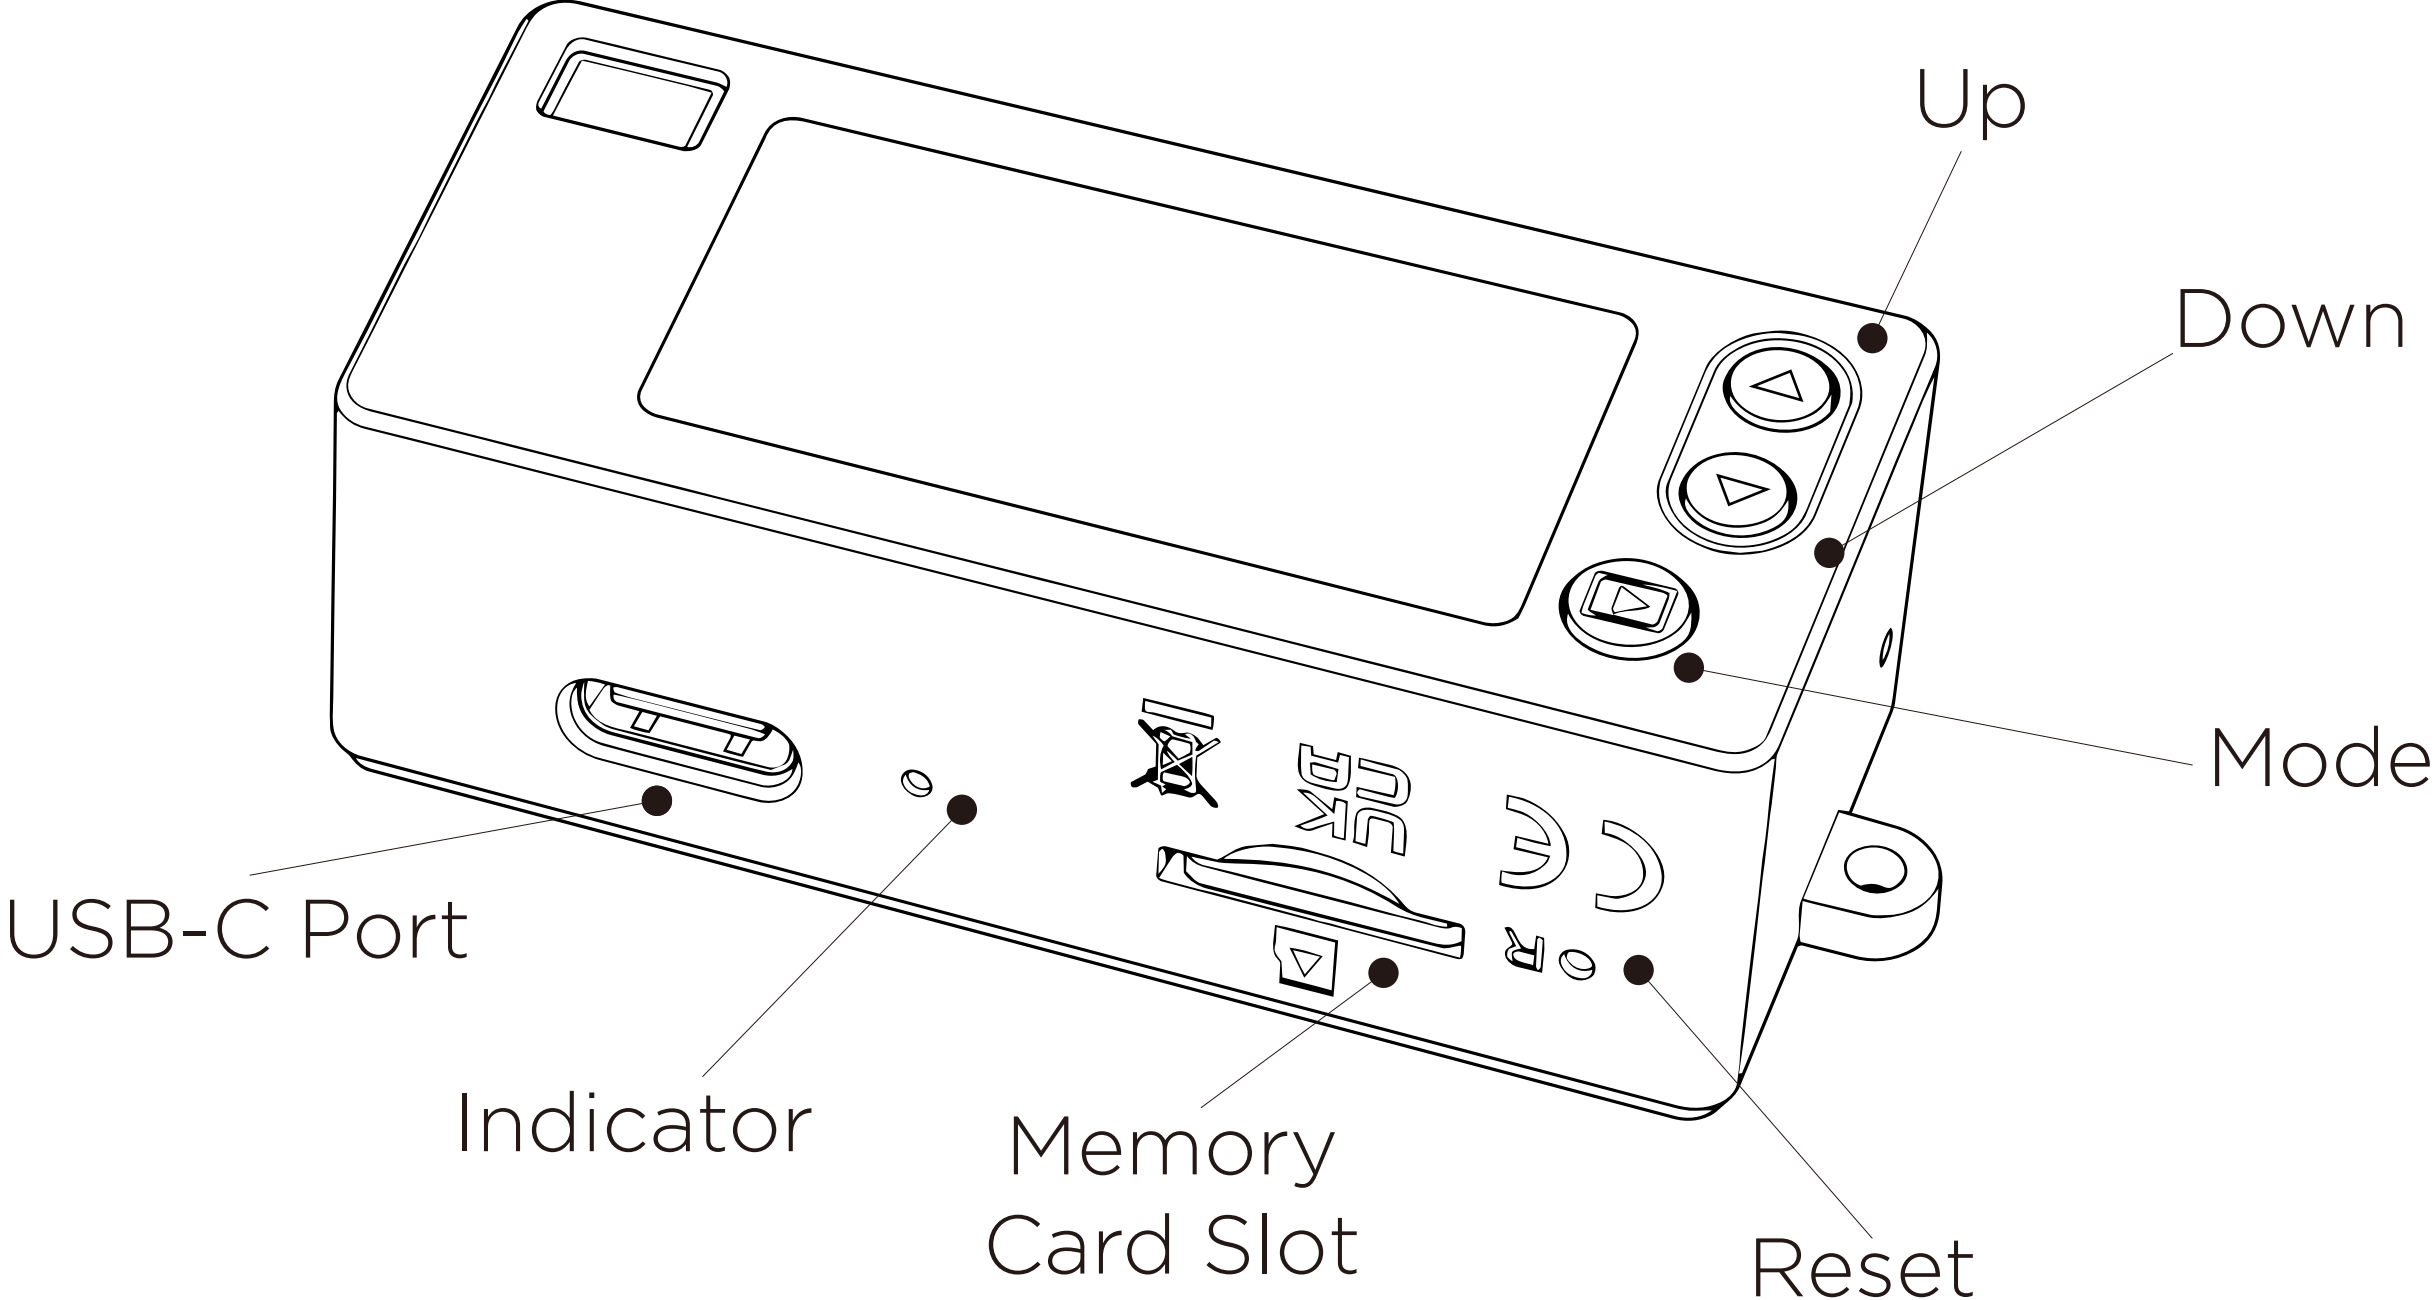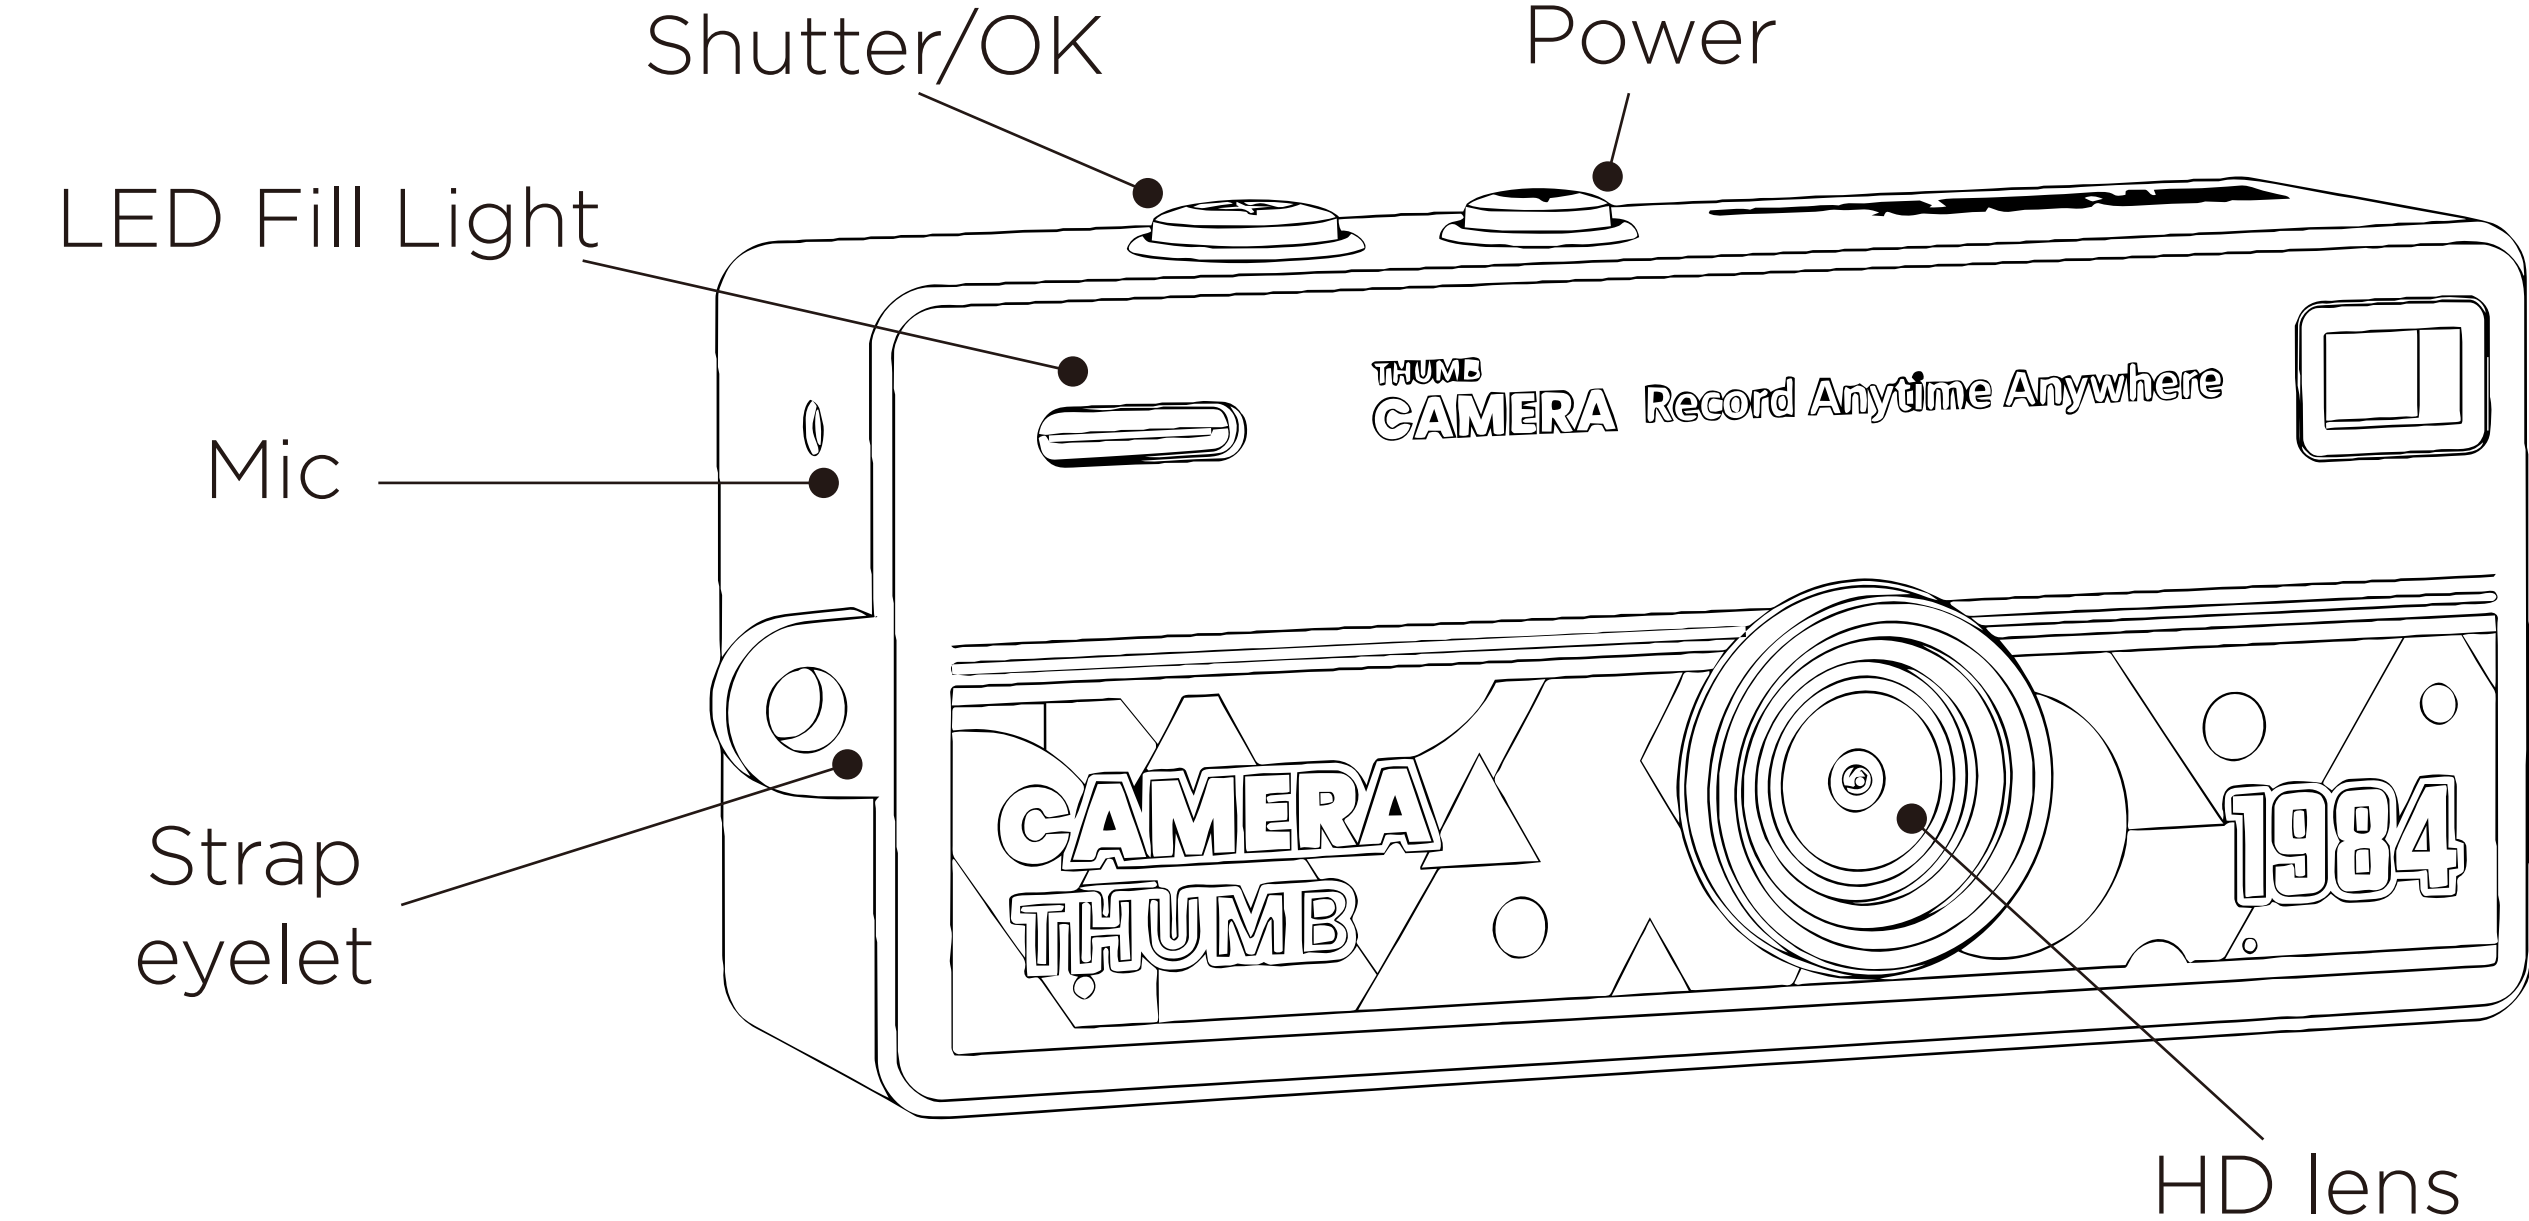


Operations

Power On/Off

Press and hold the "Power" button for 3 seconds to turn the camera on or off.

Switching Working Modes

 Once the device is started, press the "Mode" button once to switch between different working modes.

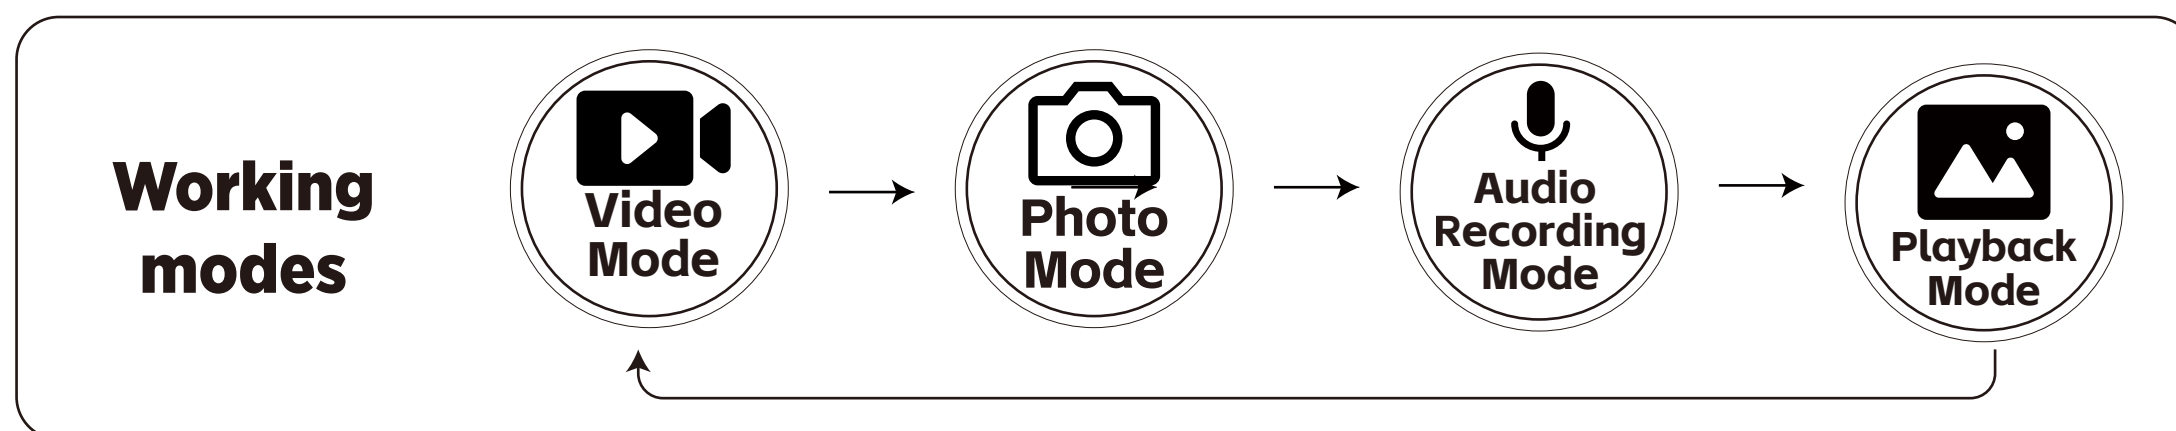

Recording Videos

The default mode is video mode. Press the "Shutter" button to start recording a video. Press the "Shutter" button again to stop recording.

Taking Photos

Switch to photo mode and press the "Shutter" button to take a photo.

Audio Recording

Switch to recording mode and press the "Shutter" button to start/stop recording.

Playback

Switch to playback mode and press the "Up"/"Down" button to select a photo or video. Press the "Shutter" button to play the video. Press and hold the "Mode" button to display the delete menu, and press the "Shutter" button to delete the current file.

Menu Settings

Press and hold the "Mode" button in standby mode to display the settings menu. You can adjust various camera settings such as date/time, auto power off, language, etc.

Motion Detection Function

1. **Enable:** Go to **Menu -> Motion Detection -> ON**.
2. **Operation:** Return to recording mode. Camera records automatically for about 20 seconds when motion is detected.
3. **Disable:** Stop recording by keeping the camera still. Then, Long-press the "**Mode**" button -> **Menu -> Motion Detection -> OFF**.

Reset

If the camera freezes or does not operate normally, use a SIM ejector pin (not included in the package) to insert into the reset hole (R) and perform a reset.

Outputting Videos and Photos

Connect the device to a computer and select "Memory" when connecting. The computer will recognize the camera's disk, allowing you to copy or play back internal files.

The video format is AVI. We recommend using **VLC Media Player** for video playback.



*Don't use a **USB hub** - avoid disk recognition issues.*

Charging

Please use a DC 5V adapter to charge the device.

Filters

In video or photo shooting mode, press the "Down" or "Up" button to cycle through the filters.

Quick Flash ON/OFF


In video or photo shooting mode, press and hold the "Down" button to turn the flash ON or OFF.


Screen Rotation



In video or photo shooting mode, press and hold the "Up" button to invert the screen.


Support and Warranty


The product comes with a 1-year warranty from the date of purchase. If you encounter any issues during use or have any suggestions, please do not hesitate to contact us by email.

-  Product Defects

 Product Damage

 Unsatisfactory Quality
-  Mismatch with Description

 Dislike of Style

 Amazon Return Window Closed

Contact: support@oiktech.com

About us

Founded in 2019 by a convergence of photography enthusiasts and technology experts, we are a company dedicated to pioneering innovative imaging products. Our core focus is on developing high-quality visual solutions, including digital cameras, night vision binoculars, digital microscopes, body cameras, and security surveillance systems. Marketed under our established brands Sheawasy[®], Fueiyita[®], and OIKSPY[®], we are committed to technological innovation, consistently delivering exceptional performance and value to our global customer base.

For more information, please visit: www.oiktech.com